 
 
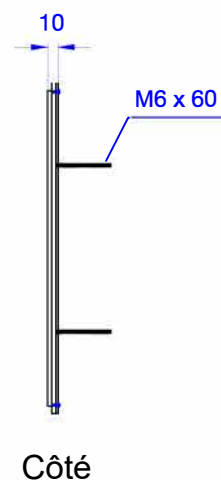 
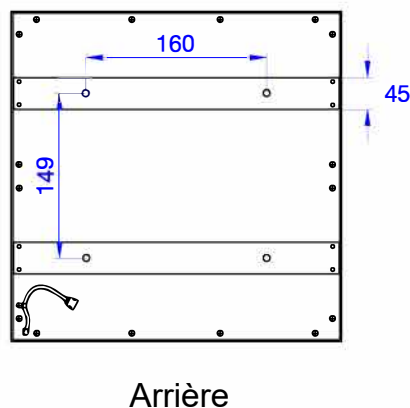 


Dimensions

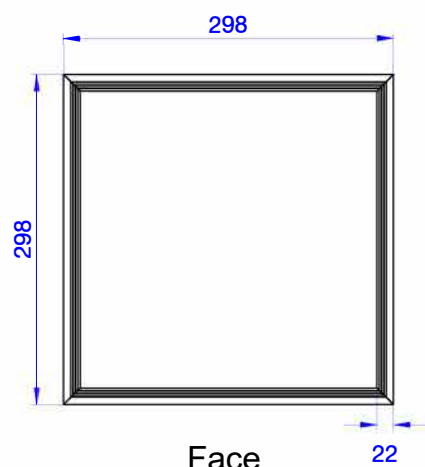

 
Installation

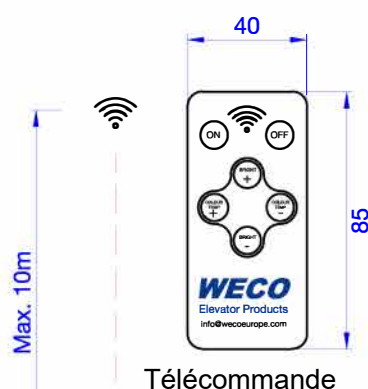

Instruction de la télécommande

1. 'ON': allumer la dalle
2. 'OFF': éteindre la dalle
3. 'LUMINOSITE+': appuyer une fois pour + 10% de luminosité
4. 'LUMINOSITE-': appuyer une fois pour -10% de luminosité
5. 'TEMP COULEUR+': appuyer une fois pour +10% de température de couleur (K)
6. 'TEMP COULEUR-': appuyer une fois pour -10% de température de couleur (K)

❗ La télécommande utilise la technologie infrarouge. Ainsi, toute obstruction entre la télécommande et le récepteur infrarouge peut entraîner une perte de fonction.

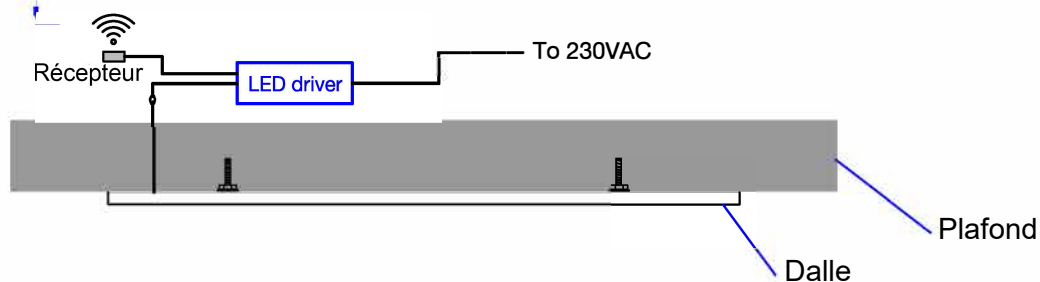


Caractéristiques techniques

Puissance	Lumens	Tension d'entrée	CCT
10W	700 ~ 850lm	100 ~ 240VAC	Ajustable entre 3000 ~ 6000K


DATASHEET
LED PANEL ADJUSTABLE
07.LP3.3030.CCT

WECO

 Dimensions

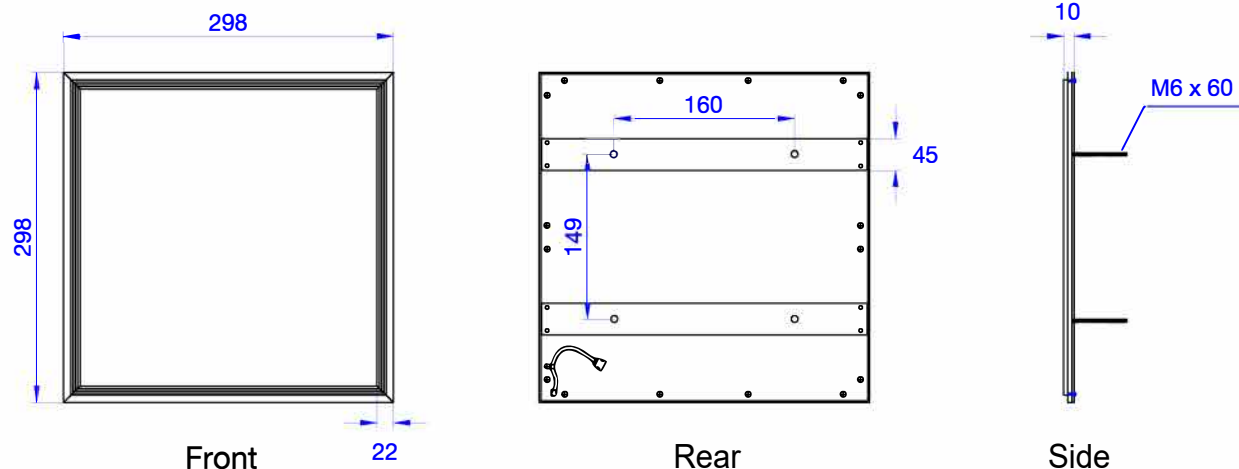


Installation

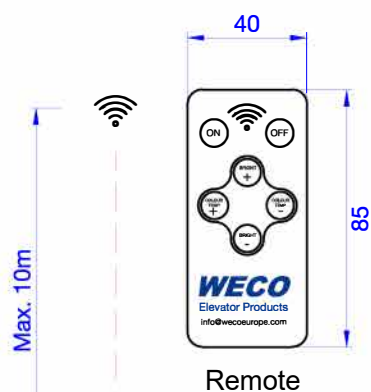 

Remote instruction

1. 'ON': turn on the panel
2. 'OFF': turn off the panel
3. 'BRIGHT+': press once for +10% brightness
4. 'BRIGHT-': press once for -10% brightness
5. 'COLOUR TEMP+': press once for +10% the colour temperature (K)
6. 'COLOUR TEMP-': press once for -10% the colour temperature (K)

 ⓘ The remote control uses infrared technology. As such, any obstruction between the remote control and the infrared receiver may result in loss of function . obstruction between the remote control and the infrared receiver may result in loss of function.

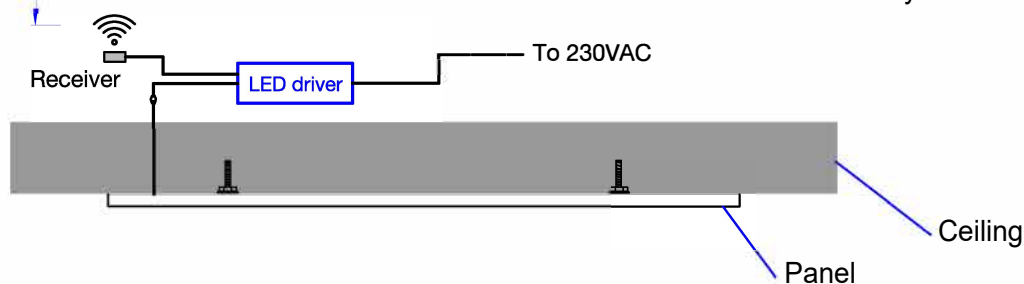

Technical features

Power	Lumens	Input voltage	CCT
10W	700 ~ 850lm	100 ~ 240VAC	Adjustable from 3000 ~ 6000K