



Dimensions

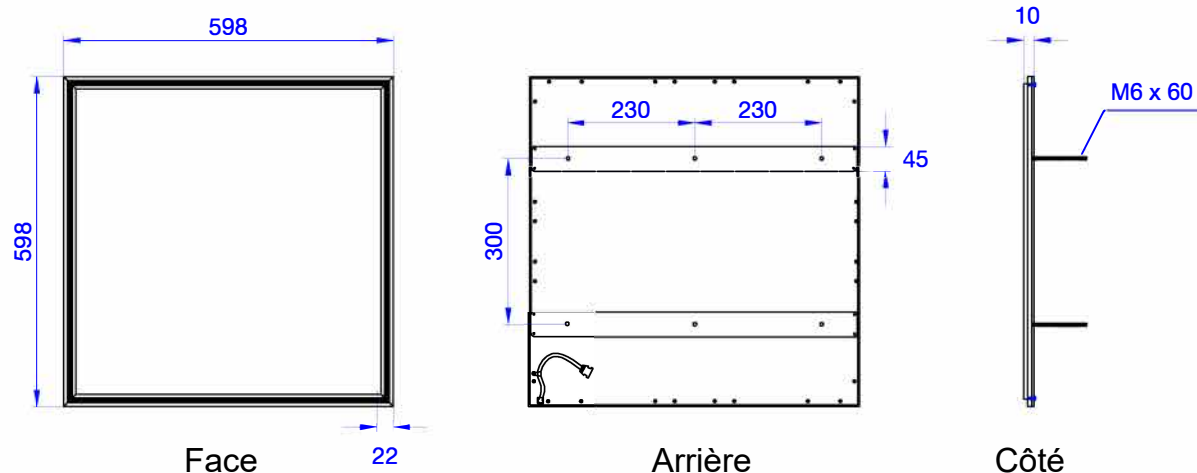


Installation

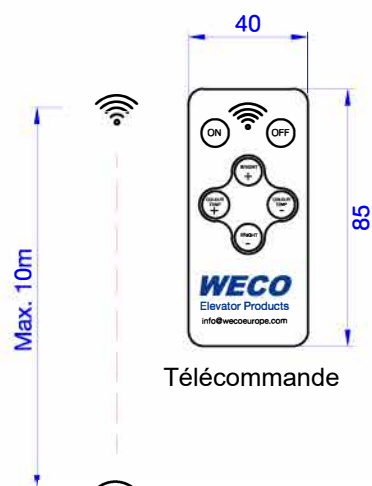

Instruction de la télécommande

1. 'ON': allumer la dalle
2. 'OFF': éteindre la dalle
3. 'LUMINOSITE+': appuyer une fois pour + 10% de luminosité
4. 'LUMINOSITE-': appuyer une fois pour -10% de luminosité
5. 'TEMP COULEUR+': appuyer une fois pour +10% de température de couleur (K)
6. 'TEMP COULEUR-': appuyer une fois pour -10% de température de couleur (K)

ⓘ La télécommande utilise la technologie infrarouge. Ainsi, toute obstruction entre la télécommande et le récepteur infrarouge peut entraîner une perte de fonction.

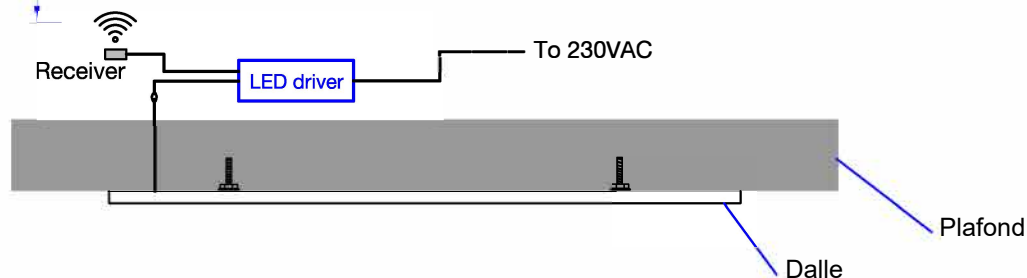

Caractéristiques techniques

Puissance	Lumens	Tension d'entrée	CCT
36W	2800 ~ 3300lm	100 ~ 240VAC	Ajustable entre 3000 ~ 6000K


DATASHEET

LED PANEL ADJUSTABLE


07.LP3.3012.CCT

WECO

Dimensions

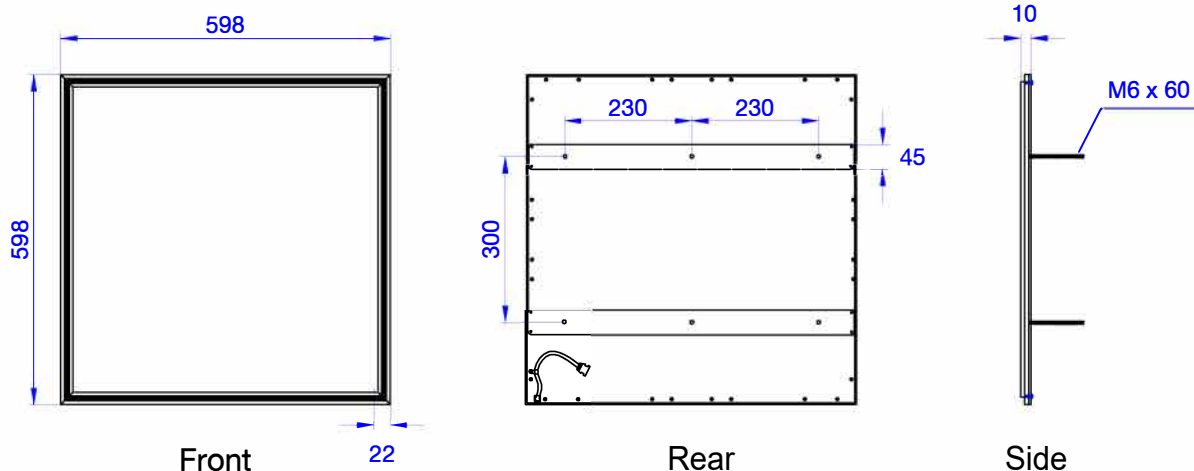


Installation

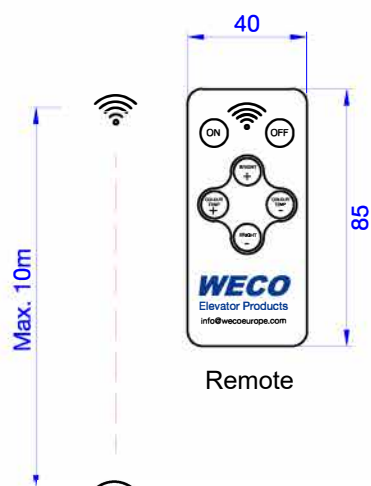

Remote instruction

1. 'ON': turn on the panel
2. 'OFF': turn off the panel
3. 'BRIGHT+': press once for +10% brightness
4. 'BRIGHT-': press once for -10% brightness
5. 'COLOUR TEMP+': press once for +10% the colour temperature (K)
6. 'COLOUR TEMP-': press once for -10% the colour temperature (K)

ⓘ The remote control uses infrared technology. As such, any obstruction between the remote control and the infrared receiver may result in loss of function.

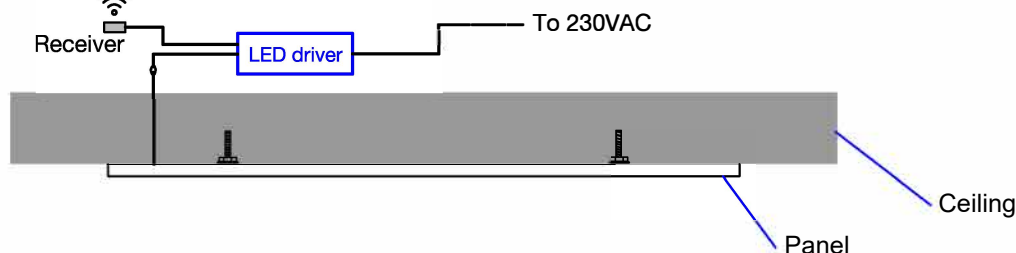

Technical features

Power	Lumens 2800	Input voltage 100	CCT
36W	~ 3300lm	~ 240VAC	Adjustable from 3000 ~ 6000K